

think safe

USER MANUAL

Deposit safe Euro 100.3



User manual deposit safe Euro 100.3

The deposit safe is composed of two parts:

- The holder: this part is fixed onto the counter with bolts.
- The money compartment: this part is placed into the holder.

Time lock

The safe is equipped with a time lock (opening delay) which always need to be activated before the money compartment can be removed. The opening delay is preprogrammed on 3 minutes.

Keys

The safe has 2 sets of 2 keys. There are 2 keys for removing the money compartment and 2 keys for opening the money compartment. It is recommended to store one set of keys separately so that in case of possible loss of the keys the safe can still opened. Do not leave the key in the safe when it is not necessary to open it.

Power supply

The safe works on a 220V/9V adapter. In case the power is cut off, the time lock cannot be opened.

Warning light

The safe has a light on the front. When the safe is connected, a red light will flash. As soon as the time lock is activated, the red light remains on. Once the set time frame expired, a green light remains on. As soon as the key is turned completely, the light will go off, meaning that the money compartment can be taken off.

Alarm button (red button, left from the lock)

When, in case of a possible robbery, the alarm button is pressed, the time lock will automatically activate a delay of 30 minutes. During this time, the money compartment cannot be removed and the flash will flash very fast.

Stickers

The supplied stickers can be put on the shop door to point out to possible robbers that the money is deposited in a deposit safe.

Taking off the money compartment

To take off the money compartment, the time delay need to be activated.

Turn the key by a quarter to the right: the key is now in upright position. The deposit safe gives an interrupted beep sound. (IF ACTIVATED) the red light flashes.

After expiration of the selected time frame the safe will give a continuous beep sound. The green light flashes. Turn the key by a quarter to the right. The light goes off. You can now remove the money compartment.

Opening the money compartment

To open the money compartment insert the key in the lock on the top and turn the key by a quarter. You can now open the back side of the safe and remove the money.

WHEN OPENING THE DOOR OF THE COMPARTMENT, BE AWARE NOT TO OPEN IT FURTHER THAN IN AN ANGLE OF 90 DEGREES! Therefore before opening, put the compartment on a flat table. This is to prevent damaging of the hinge.

Lockable money insert opening (optional)

For some compartments this lock allows to lock the money insert opening. Turn the key by a quarter to the other side. The money insert opening will close from the inside. Please be aware that the money insert opening is open when you put the safe into the holder.

Setting the opening delay (standard: 3 minutes)

First turn off the power!

On the inside of the holder, at the top, there is a small metal cover that is secured by a screw. When opening this cover, you will notice four small switches.

No 1 – 3 are to be used for setting the opening delay.

No 4 is for switching on and off of the sound signal during the opening delay.

You can set the opening delay as following:

Switch number	1	2	3	Time delay
	0	0	0	0 minutes (test-mode)
	1	0	0	1 minute
	0	1	0	2 minutes
	1	1	0	3 minutes
	0	0	1	8 minutes
	0	1	1	10 minutes
	1	1	1	15 minutes

After having set the opening delay fix the metal cover after which the lock works normal again. Then turn on the power.

First test the lock without compartment in the holder.

When the time lock works properly, you can put the compartment back into the holder.



Nauta BV
info@nauta.com
nauta.com



Nauta Security Storage BV
info@nautasecurity.com
nautasecurity.com

Hanzeweg 10
3771 NG Barneveld
Nederland

